



Adaptive Scissors

Dual Control Training Scissors.



(Available for Left or Right handed Users)

The child places his/her fingers through the loops furthest from the blade, whilst an adult places their fingers through those nearest the blade to assist with placement, guidance and control over the cutting action.

Easi-Grip Scissors.

(Available for Left or Right handed users)

These scissors are very lightweight and easy to use. It only requires very gentle pressure between the fingers and thumb, or fingers and palm of the hand, to close the scissor blades. The scissors automatically reopens after each cut.



Mini Easi-Grip



(Available for Left or Right handed users). All the features of the standard Easi-Grip scissors but 2/3 the size.

Easi-Grip Stand

This plastic stand can be used to convert hand-held Easi-Grip scissors into a table-top scissors.



Long Loop Easi-Grip



(Available for Left or Right handed users)

A long-loop has been incorporated into the handle. These allow for a more positive and firm hold of the scissors as it prevents it twisting in the hand. This is recommended for users with a reduced grip strength and poor grip position.

Long Loop Scissors

(Available for Left or Right handed users.

The extended loop of these scissors allows the middle, ring and little finger to be used, giving increased strength and control for the cutting action. This advantage makes these scissors suitable for those with a tremor or poor motor control.



Self-opening Long Loop Scissors



(Available for Left or Right handed users).

As above, these have been fitted with a spring which automatically reopens the scissors as soon as the pressure is released.

Adaptive Scissors



Self-opening Scissors

(Available for Left or Right handed

users. Conventional looking scissors, which will automatically reopen the scissors after each cut.

Mounted Table Top Scissors

(Available for Left or Right handed users)

Suitable for use by children with very limited strength and control. The paper



is simply pushed along the base and cut by pushing the



scissor handle down a spring will automatically reopen the scissors ready for

the next cut.

Available in two models: with a green plastic base with rubber feet, this is light weight but has sufficient stability to meet the needs of many children; or for maximum stability on a wooden base with non slip strips.



Push Down Table Top Scissors

These scissors are easy to use as they only require a pushing down action on the top handle. The spring will automatically reopen the scissors one the pressure is released.

Where to purchase:

Nottingham Rehab Supplies,

0845 121 8111

www.nrs-uk.co.uk

Homecraft Rolyan,

08702 423 305

www.homecraft-roylan.com

Peta (UK) Ltd,

01245 231118

www.peta-uk.com